

● For EPN R2400



- ▶ Continuous ink system
- ▶ Continuous ink supply system
- ▶ Continuous ink flow system
- ▶ Continuous ink feed system
- ▶ Bulk ink system

Unpacking Instruction


1. CIS ink system (Continuous ink system) 1 Set
2. Pipeline Clincher or Arm Support 1 Set
3. Installation Instruction 1 Copy
4. Syringe 1 Set

Notice


1. Not drinkable, keep it out of the reach of children
2. Avoid exposure to direct sunshine and don't keep it in the high or freezing temperature.
3. Avoid collision and fallen down.
4. Please do not take out the cartridges at random after installing the CIS ink system.
5. Using it in the temperature of 10-40°C
6. The CIS ink system has passed the strict compatible checking, so we suggest to use our ink and cartridges to keep the printing quality.
7. Mix two different brand ink into the CIS ink system is not recommended.

Refilling ink


ALL OPEN

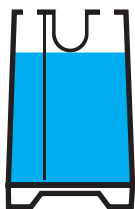

FILL INK TO THIS LEVEL
(Only for reference)

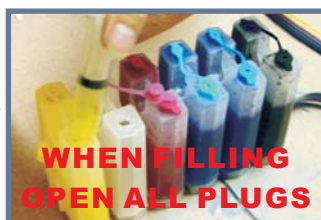

ALL OPEN

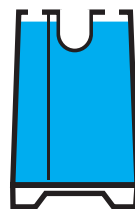

FILL INK HIGHT TO FULL
(No recommend)


When you want to filling ink, firstly, please pull out the rubber plugs from the fill-hole of the ink tank; use a common syringe to fill ink (please see the step as picture 2); and then, pull out rubber plugs from the CIS cartridge and use a syringe to draw air, pull the syringe position for air-removing (please see the step as picture 3), then the ink will flow into the ink cartridges from the tanks automatically. After filled, you need to stuff all holes with the rubber plugs.

Tanks working :


OPEN 1 CLOSE 2



CLOSE ALL

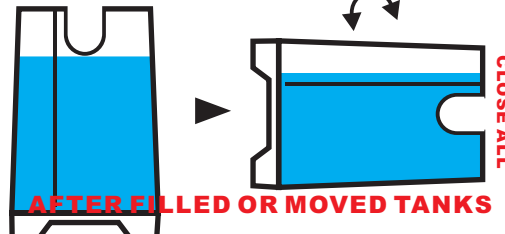

OPEN 1 CLOSE 2

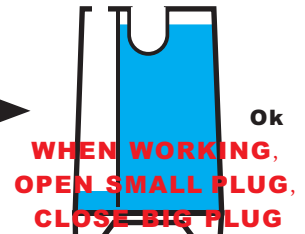

- 1 Press the "ink cartridge replace Button"
Move the cartridge to the cartridge to cartridge remove position
Unplug the power connector




- 2 Remove out the original cartridges ,then place down each cartridge according to the color ,in the meantime, make every cartridge in the correct position.
Remove the cartridge cart back and place the cartridges down as show in picture ,then click the cartridges to the right position.



- 3 Rip the label on the balance arm
Stick the Support arm at 25cm distance from the side of the printer
Fix the balance arm stick on the support arm as show on the picture, Rip the label on the shortest arm ,And Stick it on the right side of the printer, but need to keep it in the same horizontal line as show in the picture




- 4 Clip the tubes in the clip
Adjust the tube length and move the cartridge car. Insure there will no block and collision when the tubes moving with cartridge car .Insure there's plenty length of tube to make the cartridge cart can thoroughly move to the left side.

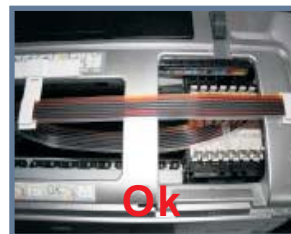

- 5 The tube is excessive long, it is not ok.
The tube is twist ,it is not ok.
Finish instlaalation, now ok to work.

 Reset cartridges:



The ink will be showed less and lessr when printing, as the original cartridges.
The chips for CIS can auto reset when the printer show '0' capacity ink.
If use for a long time ,the computer tells you to replace cartridge doesn't work,
Power off the printer for 1 minute, then restart ok.